

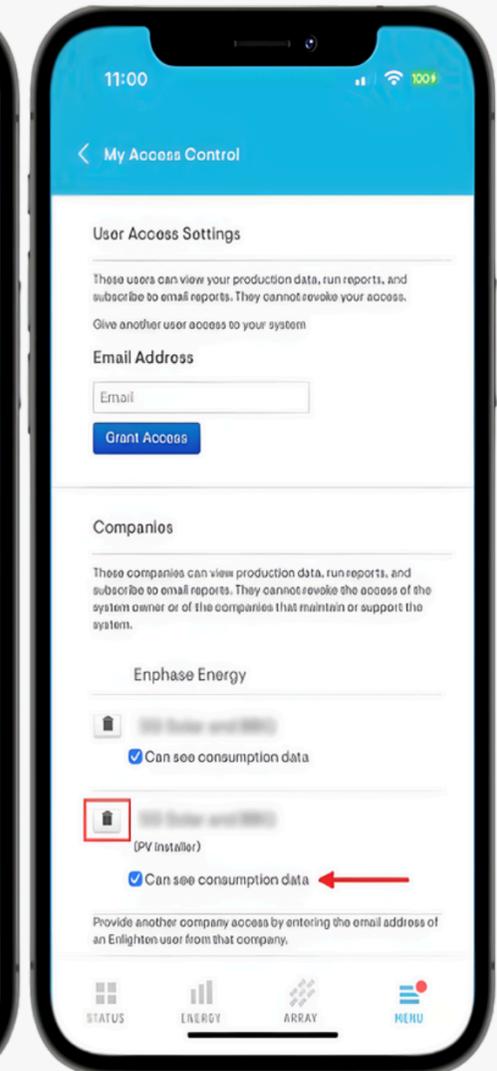
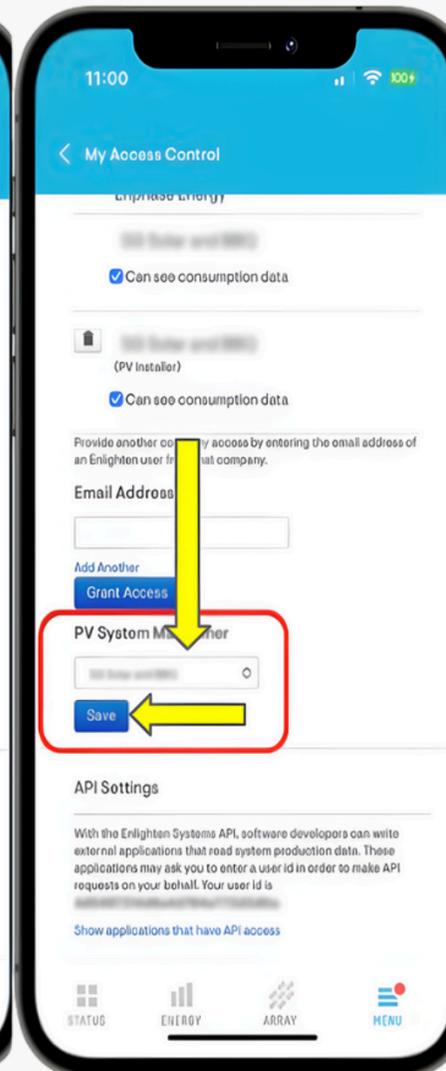
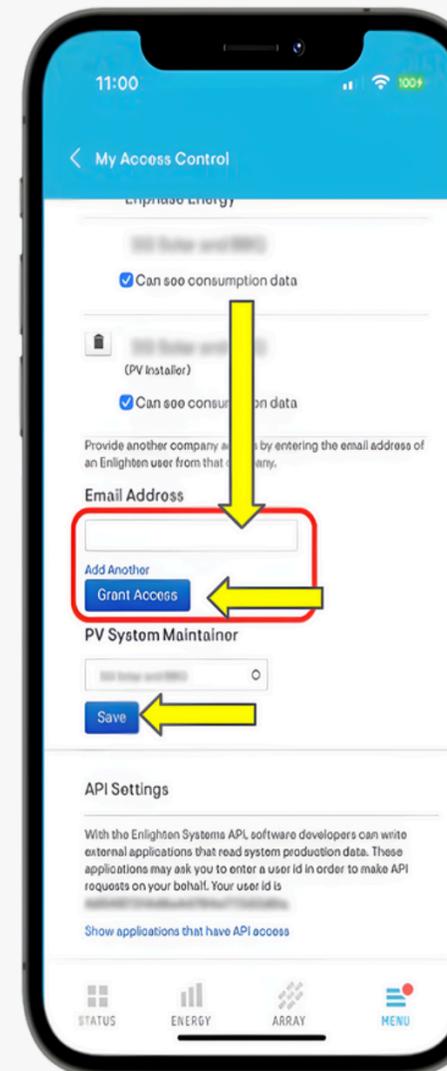
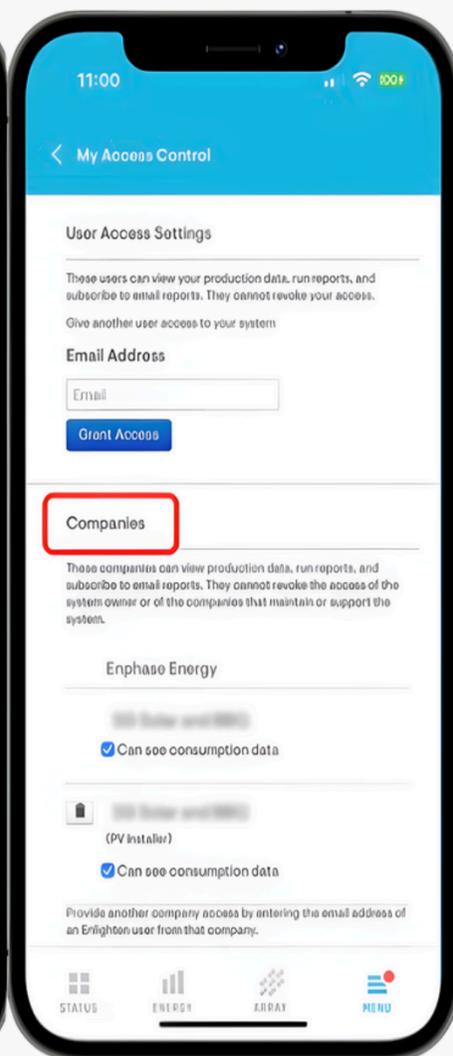


# Add Solar Insure as Your System Maintainer

Follow these simple steps to connect your Enphase system with Solar Insure

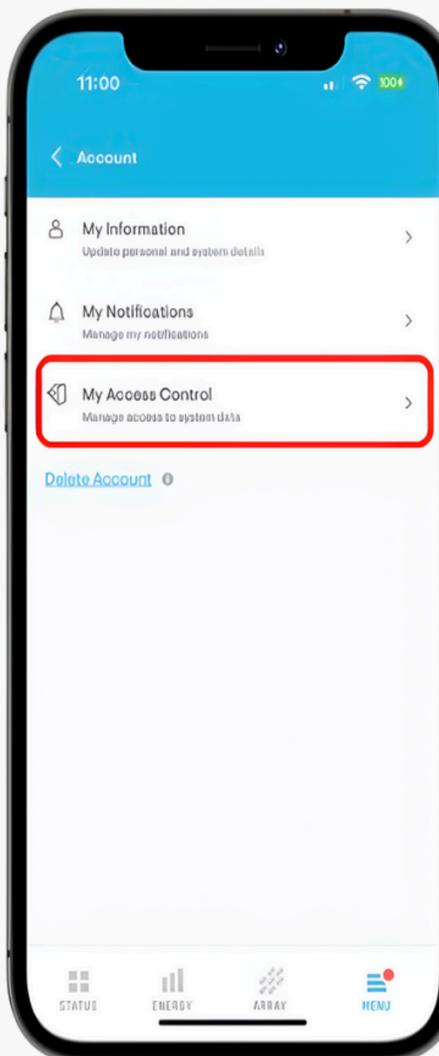

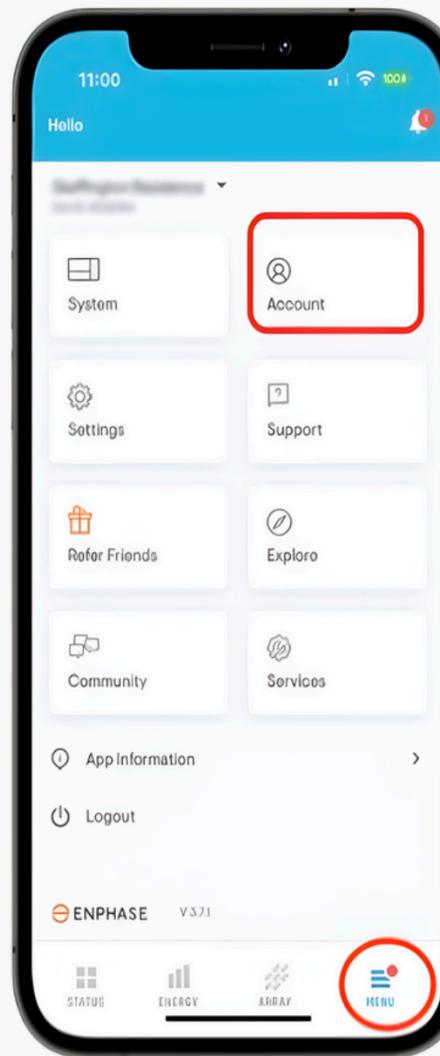

01

Tap Menu  
→ Account

02

Select  
My Access Control

03

Scroll to  
Companies section

04

Enter **monitoring@  
solarinsure.com**  
→ Grant Access

05

Select PV System  
Maintainer → Save

06

Confirm Solar Insure  
shows under Companies